Look on our website for an online version: **www.3xm.com.au**

PGSSCL52Q PGSX52Q PCMX52Q PCMXW52Q

PREMIUM CANOPY FITTING INSTRUCTIONS TO SUIT

MITSUBISHI TRITON MQ 2015+

RECOMMENDATION: It is recommended that this canopy be installed by a certified fitter/mechanic and auto electrician.

Before installation, unpack and thoroughly inspect canopy to

Ensure it is free of damage and all parts are accounted for.

Canopy Preparation

1. Position canopy against a wall with the front window on the ground. Place something soft under the base and between the canopy roof and the wall to avoid damaging the canopy. You now have access to the underside of the canopy for preparation.

2. Check the underside of the canopy and ensure all edges are clean and free of dirt and/or grease.

3. With the edges of the canopy now clean, select the left rubber seal. Attach the rubber seal by starting at one end and pressing the seal into place at evenly spaced short distance intervals. Once complete, inspect the seal to ensure it is in place as required.

4. Repeat step 3 with the front (F) and the (R) sponge seals.

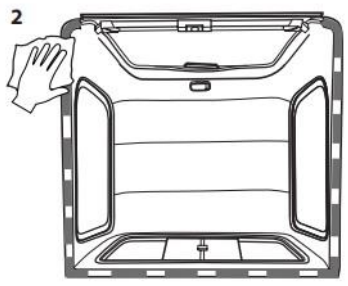

If your vehicle has a brake light mounted in the rear of the cabin, we suggest disconnection prior to avoid excessive light reflection. Speak with a authorised installer, or if installation is DIY, consult and auto-electrician before alerting any part of vehicles electric system.

Canopy Fitment

At this point in time is a good idea to inspect the clamp and understand how it is secure the canopy to the ute before proceeding.

1. The ute tub should be clean and free of items to create and obstruction-free workspace. To prevent tools scratching the ute surface while working, cut a section of the cardboard from the packaging and lay this in ute tub.

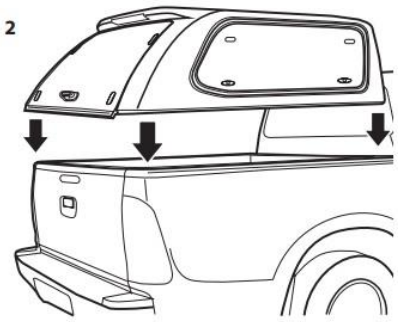

2. Lift the canopy and carefully place onto the ute tub as pictured. This requires the assistance of a second person when lifting into place to avoid the possibility of personal injury or damage to canopy.

3. Portion the wiring harness in a location so it may be easily routed and installed as required.

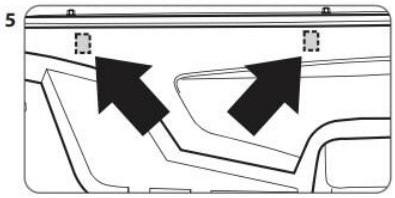

4. Check alignment to vehicle is even on both sides and adjust if necessary.

5. Decide on the best position for the clamps and mark the are with a pencil. Ideal placement will vary from vehicle to vehicle but where possible should be evenly spaced.

For vehicle with a tub liner, proceed to step 6.

For vehicle without a tub liner, proceed to step 7.

6. For vehicle with a tub liner, a small section must be cut out to allow the clamp to reach the ute tub wall. To prepare your tub liner appropriately, follow these steps

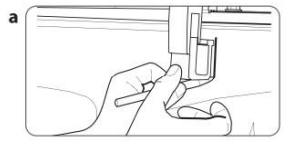

a. Trace around the bottom section of the clamp – This the section of the tub liner that is to be removed.

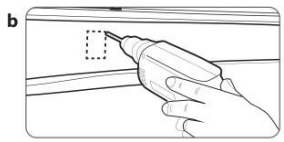

b. Drill a hole In the corner of the traced section to act an entry point for cutting.

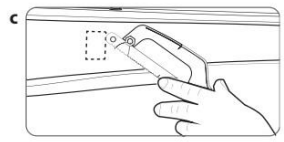

c. Use a cutting tool to remove the section and finish up by filling down any sharp edges.

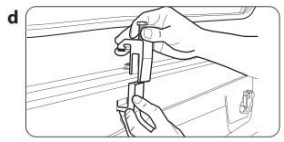

d. Check clamp will now attach to ute tub without obstruction and adjust if necessary. Repeat for all other clamp position.

7. Inside the side canopy rails are 3 threaded brackets, locate these brackets with the holes with in the clamps, Loosen the bolt within the clamp and slide the bottom part of the clamp under the lip of the tub, locate the top of the clamp on to the side rear of the canopy, using the pan head screws supply screw through the clamp in to bracket to stop the clamp coming away from the canopy now tighten the clamp finger tight using a 10mm spanner on the bolt – Do this to the three clamps on each side.

8. Check canopy is still evenly aligned and adjust if needed.

9. Tighten clamps to secure canopy to ute tube. Do not use excessive force as this could damage the canopy.

10. See Below:

FUNCTION	CANOPY WIRING	VEHICLE WIRING
Constant Power (Dome Light)	Red	Positive Terminal on Battery
Central Locking (Lock)	Brown	Blue
Central Locking (Unlock)	White	Blue/Black
Earth	Black	Body of the car
Brake Light	Yellow	Brake wire in rear tub light

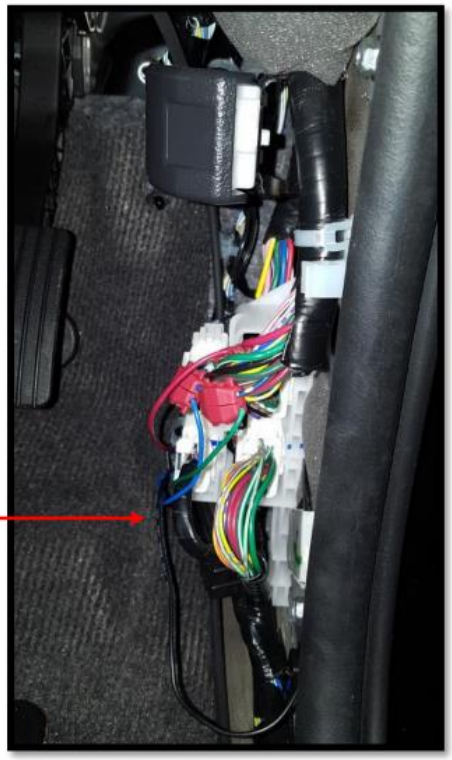

- Wires are at the front of the vehicle on the driver's side behind the kick panel
- Plug A is behind the rear tail light

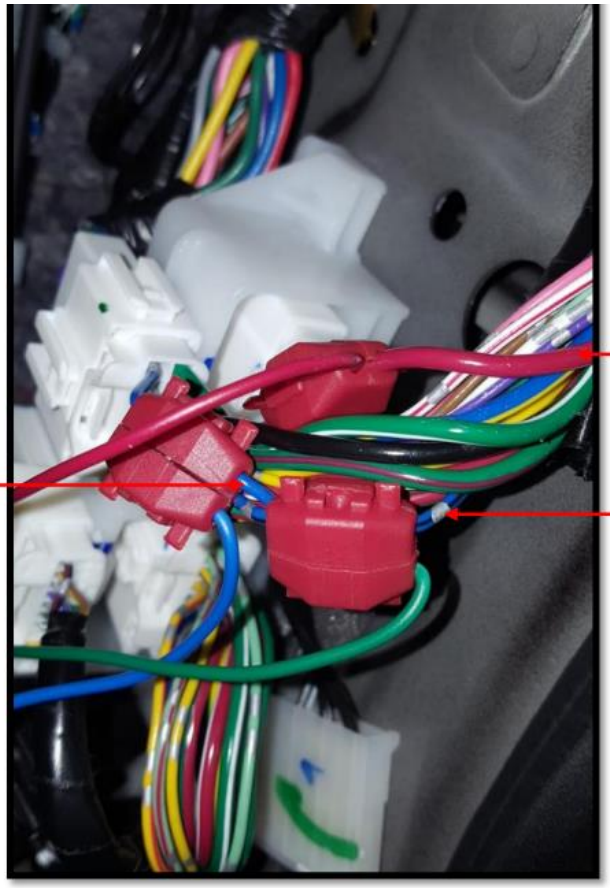

Brown to Blue (Central Locking- Lock)

White to Blue/Black (Central Locking- Unlock)

Red to Red (Constant Power-Dome light)

Black to Body of the car (Earth)

Plug A

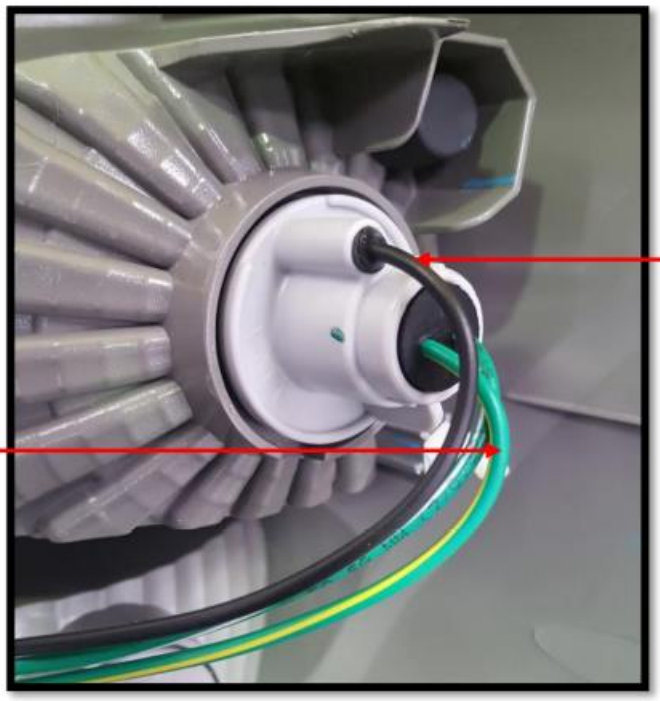

Yellow to Green/Yellow (Brake Light)

Black to Black (Earth)

Running the loom

You will find an opening with a grommet sealing it under the rear LHS seat to run the loom out under the vehicle. Then run the loom to the rear of the vehicle behind the tail light.

PLEASE NOTE

- Avoid drilling holes in the vehicle. There are always openings into the cabin underneath the vehicle or at the rear.
- Using a L.E.D test light, test all electrical components of the vehicle before and after wiring the canopy to ensure that everything works correctly.
- Ensure you replace all vehicle trim and return the vehicle interior back to how it was found.

11. Check all wiring is working, clean canopy down and add scuff tape to the rear door of the ute to stop the rubbing of the rear door on to the paint.